

# **INSTRUCTION MANUAL**

## **ONE-PIECE TELEPHONE - CAT # F6000**

### **LED INDICATOR**

The red indicator located on the back of the telephone illuminates when the telephone is in use, or when the handset has not been properly replaced on-hook after a call.

### **TONE/PULSE DIALING SWITCH (T/P)**

To determine the correct position of this switch, first select the TONE position, then press button 1 on the dial pad. If the dial tone disappears, your phone is ready for use. However, if a dial tone remains, select the PULSE position.

### **FLASH BUTTON (F)**

Your new telephone has 100ms timed hookflash for compatibility with network services such as call waiting, call transfer & 3-way conferencing provided that you are an Easycall subscriber. The FLASH button also provides call transfer when used in conjunction with PABX systems requiring 100mS hookflash.

### **MEMORY STORE (S)**

Your new telephone is able to store up to ten telephone numbers with a maximum of 20 digits in each number.

- lift handset and press S button
- key in phone number to be stored
- press S button again
- press memory location buttons 0 to 9. The number is now stored with that memory location
- hang up the telephone

### **MEMORY DIAL (M)**

Numbers previously stored to memory can be dialled by pressing M button followed by one of the memory location numbers into which the number was stored.

### **HOOKSWITCH**

This button is used to hang up the telephone. Placing the telephone face down onto a flat surface will activate this switch.

### **RINGER ON/OFF SWITCH**

Used to switch the telephone's ringer on or off.

DISTRIBUTED IN AUSTRALIA BY  
**ACCESS COMMUNICATIONS PTY LTD**  
TEL: (02) 9417-5311  
FAX: (02) 9417-6976

IMANMIN.DOC