



The tone-ringer can also be connected to the telephone line by using a 6 position U.S. modular RJ plug. The RJ plug is then simply inserted into the RJ "Line In" socket on the tone-ringer PCB. The connection to the telephone line is wired to pins 3 & 4 (the centre two contacts) of the plug. The tone-ringer is wired in parallel across the exchange line (or analog telephone socket).

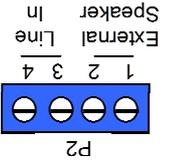



The left hand pair are used to connect an optional external horn speaker (Cat # K3505). The internal/external speaker selection jumper (J1) must be moved to "EXT" (position B) if an external speaker is used.

Four screw terminals are provided on terminal block P2.

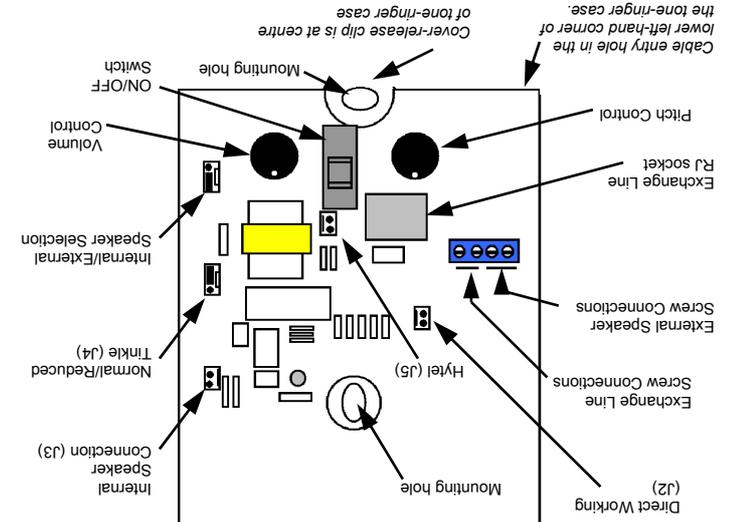


PCB LAYOUT

The ON/OFF slide switch is used to activate or silence the tone-ringer. Slide the switch down to the bottom position to prevent the tone-ringer from operating. The volume control (towards the right) increases the volume of the speaker. Turning the control anti-clockwise (towards the left) decreases the speaker's volume.

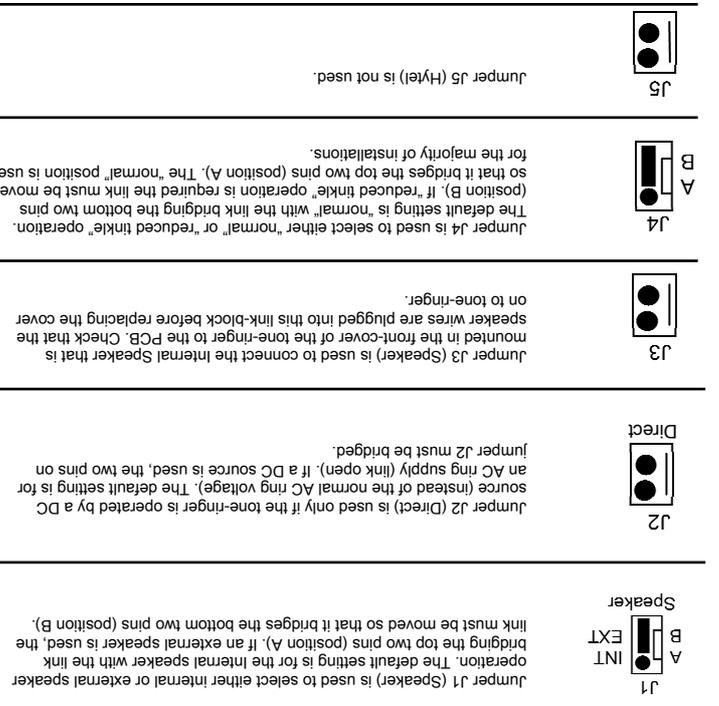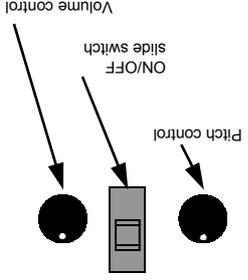

INSTALLATION INSTRUCTIONS


- Remove the front cover by inserting a small flat-bladed screwdriver into the latch-release slot as shown opposite. Lift the front panel off (bottom edge first) and unplug the internal speaker wires from jumper J3.
- Using the two mounting holes in the tone-ringer case, screw the tone-ringer case to a vertical surface using suitable hardware. The two mounting hole centres are 84mm vertically apart.
- The tone-ringer is wired in parallel across an exchange line or on analog telephone by:
 - Using the "LINE IN" screw terminals (screws 3 and 4 on the right-hand side) on the blue-coloured screw-terminal block. Strip the conductor ends and insert them into connectors 3 & 4 and tighten the two screws.
 - Using the RJ socket on the tone-ringer PCB. This 6P2C socket uses the two centre contacts (3 & 4) for the exchange line connection. Use a standard 6P modular line cord to connect the tone-ringer to the exchange line or analog telephone.
- Refit the Internal Speaker connector to jumper J3. Insert the two clips on the top of the cover into the slots at the top of the case. After depressing the catch at the bottom centre of the cover, push the cover firmly onto the case.
- Slide the switch to the "ON" position and adjust the Pitch and Volume controls.

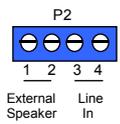

Extension Tone Ringer K3507 Installation Instructions

Two steps are involved to connect an external speaker to the tone-ringer.

 - Strip the conductor ends, insert them into connectors 1 & 2 (EXTERNAL SPEAKER) on the left-hand side of the blue-coloured screw-terminal block and tighten the two screws.
- Move the link on jumper J1 to the "EXT" position (the lower two pins).



Distributed in Australia by
ACCESS
 COMMUNICATIONS PTY LTD
www.accesscomms.com.au

BRISBANE Tel (07) 3308 5555 Fax (07) 3308 5500
 MELBOURNE Tel (03) 9330 8333 Fax (03) 9330 8330
 SYDNEY Tel (02) 9414 8888 Fax (02) 9414 8800

