

Gecko Wireless Keyboard User Manual and Warranty



gecko™

WARRANTY INFORMATION - FOR AUSTRALIAN CONSUMERS ONLY

Powermove Distribution provides its accessory range of products with a 1 Year back to base warranty: "Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure".

The warranty offered is in addition to other rights and remedies offered under consumer law.

The conditions contained in this warranty apply to purchases made within Australia only.

Purchases made outside of Australia are covered by the warranty procedures and policies that comply with each respective place of purchase.

Conditions of warranty:

- The consumer must retain proof of purchase for the warranty period.
- The warranty period is valid for 1-year from the original purchase date.
- The warranty applies only to defects in material or workmanship that occur during normal use of the product.
- The warranty is a 'back-to-base' warranty meaning the consumer is responsible for the costs associated with returning the product to their place of purchase or to Powermove Distribution.
- The consumer must return the goods, original packaging (where feasible) and proof of purchase to make a warranty claim.
- If a replacement product is supplied the warranty period applies to the balance of the warranty period from the original purchase date.

The warranty does not cover:

- Failure that has occurred as a result of accident, abuse or mis-treatment.
- Goods that are damaged as a result of other third party products.
- Any misrepresentations given that are not covered by the warranty.

Warranty claim procedure:

- The consumer must return the goods as per the requirements stated in 'conditions of warranty' section d & e.
- If the consumer is unable to return the goods to the place of purchase they can send the goods with the required packaging and documentation, along with their contact details including address, phone number and e-mail to:

Warranty Department
Powermove Distribution
28 The Gateway
Broadmeadows, Vic 3047

Ph: 03 9358 5999 Fax: 03 9357 1499
E-Mail: support@powermove.com.au

Thank you for purchasing another quality Gecko product.

Introducing Gecko wireless keyboard, pack includes a wireless keyboard with USB receiver to connect wirelessly to your computer for a wire free workspace.

Features

Wireless keyboard

The included USB receiver connects to your computer wirelessly for a reliable connection and a clutter free workspace.

Plug and play compatibility

The Gecko wireless keyboard connects automatically and is ready to use.


Please enjoy.
Yours sincerely
Gecko Team



Included in this pack:

Wireless keyboard
USB receiver
User manual

Gecko wireless keyboard

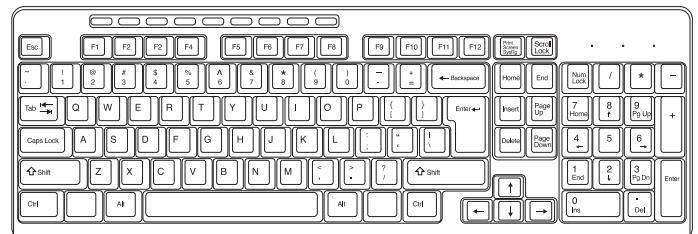

Setup instructions

- Open battery cover and insert 2 x AAA batteries, ensuring that the poles are aligned correctly.
- Remove the attached PET bag and remove the included USB receiver.
- Insert the USB receiver into the USB port of your computer, the keyboard will automatically detect and connect to the receiver.

Troubleshooting

If your keyboard is not working as expected, follow these steps to troubleshoot.

- Ensure the USB receiver is plugged in correctly to the USB port on your computer and is detected by the computer.
- Check the LED battery level indicator and replace battery if the charge is low.
- Ensure the battery is correctly inserted with correctly aligned poles.
- Test the USB receiver in a different USB port.



All registered trademarks, trademarks, brand names or product names are the property of their respective owners. ©2018 Gecko Gear Australia Pty Ltd. 71 Anzac Highway, Ashford, SA, 5035. All Rights Reserved.