


## Gecko Designer Bluetooth® Speaker User Manual and Warranty

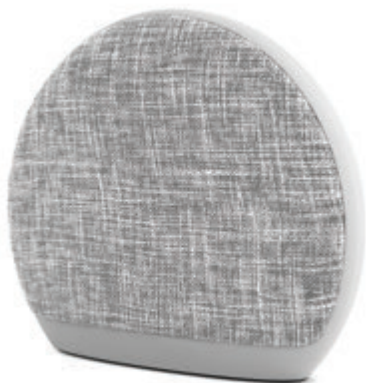

gecko™

### WARRANTY INFORMATION - FOR AUSTRALIAN CONSUMERS ONLY

Powermove Distribution provides its accessory range of products with a 1 Year back to base warranty: "Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure".

The warranty offered is in addition to other rights and remedies offered under consumer law.

The conditions contained in this warranty apply to purchases made within Australia only.

**Purchases made outside of Australia are covered by the warranty procedures and policies that comply with each respective place of purchase.**

### Conditions of warranty:

- The consumer must retain proof of purchase for the warranty period.
- The warranty period is valid for 1-year from the original purchase date.
- The warranty applies only to defects in material or workmanship that occur during normal use of the product.
- The warranty is a 'back-to-base' warranty meaning the consumer is responsible for the costs associated with returning the product to their place of purchase or to Powermove Distribution.
- The consumer must return the goods, original packaging (where feasible) and proof of purchase to make a warranty claim.
- If a replacement product is supplied the warranty period applies to the balance of the warranty period from the original purchase date.

The warranty does not cover:

- Failure that has occurred as a result of accident, abuse or mis-treatment.
- Goods that are damaged as a result of other third party products.
- Any misrepresentations given that are not covered by the warranty.

### Warranty claim procedure:

- The consumer must return the goods as per the requirements stated in 'conditions of warranty' section d & e.
- If the consumer is unable to return the goods to the place of purchase they can send the goods with the required packaging and documentation, along with their contact details including address, phone number and e-mail to:

Warranty Department  
Powermove Distribution  
28 The Gateway  
Broadmeadows, Vic 3047

Ph: 03 9358 5999 Fax: 03 9357 1499  
E-Mail: support@powermove.com.au

Thank you for purchasing another quality Gecko product. Introducing Gecko Designer Bluetooth® speaker, pack includes a fabric covered Bluetooth® speaker, for wireless audio playback.

### Features

#### Wireless Bluetooth® speaker

Connects wirelessly to your smartphone, tablet or other Bluetooth® capable device.

#### Fabric covered

Stylish, designer fabric covered speaker looks great whatever your style.

#### Portable speaker

Take your compact Designer Bluetooth® speaker with you for wireless audio on the go.

#### AUX input

Connect via AUX cable for playback from non Bluetooth® capable devices.

### Please enjoy.

Yours sincerely

Gecko Team



### Included in this pack:

Bluetooth® speaker with carry handle  
USB to micro-USB charging cable  
User manual

### Technical Specifications:

Speaker size: 52mm  
Output power: 3W  
Frequency response: 130Hz-20KHz  
Impedance: 3Ω5W  
Sensitive: 86dB±3dB

Distortion: ≤5%  
Unit size: 17.5x5x17.8 cm  
Battery: 350mAh  
Weight: 310g  
Function: 1. Bluetooth BK4.1  
2. AUX in

S/N Ration: ≥75dB



UN38.3



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Gecko Gear Australia Pty Ltd. is under license. Other trademarks and trade names are those of their respective owners. ©2017 Gecko Gear Australia Pty Ltd. 71 Anzac Highway, Ashford, SA, 5035. All Rights Reserved.

## Charging

This speaker is powered by a rechargeable lithium battery, it should be fully charged before use.

1. Connect the included micro-USB cable to the micro-USB port of the speaker and connect the USB end to a computer USB port or USB charger.
2. While charging the indicator light will be red, when the battery is fully charged the light will turn off automatically.
3. Once the speaker is fully charged, disconnect the charging cable.

## Setup instructions

1. Turn on the speaker by sliding the power switch on the back side of the speaker to the "on" position.
2. The speaker will enter Bluetooth® pairing mode and the blue indicator light will flash quickly.
3. On your device, make sure Bluetooth® is turned on then select "**GK-SPKR-02**" from the list of available devices.
4. The speaker will connect without requiring a password, if you are prompted to enter a password, enter "0000". Once your device is paired the blue indicator light will flash slowly.
5. Use the controls of your paired device to begin playing music. Ensure that you keep your paired device within 10 metres of the speaker.
6. Turn off the speaker when not in use.

## WARNING

Do not heat or place the speaker in a fire as it may explode. Please use caution and care when handling any device with electrical power. The speaker is not a toy, please keep it away from children. Low power may cause a poor connection or the Bluetooth® to not function. Please refer to your country's governing electrical body for the latest information on handling products with electrical power.

## SAFETY INSTRUCTIONS

Never charge the speaker unattended. When charging batteries you should always remain in constant observation to monitor the charging process and react to potential problems that may occur.

Do not let the device fall down the floor. The internal circuit might get damaged.

Never store or charge the speaker in extreme temperatures as this may cause it to ignite.

Store the speaker at room temperature between 5°C and 27°C for best results.

Do not expose the speaker to direct sunlight (heat) for extended periods.

Storing battery at temperatures greater than 75°C for extended periods of time (more than 2 hours) may cause damage to battery and possible fire.

Do not attempt to disassemble the device as it may cause damage.

Keep away from water and heat.

Do not over charge the battery.