

### STEP 1

installation instructions of mounting profile(with vertical cable manager)




step1:please release several screws i pointed out in the picture



Step 2:take out the cover


Do the above 2 steps can help you install the mounting profile(with vertical cable manager) into the rack frame much easier

# **BODY INSTALLATION**

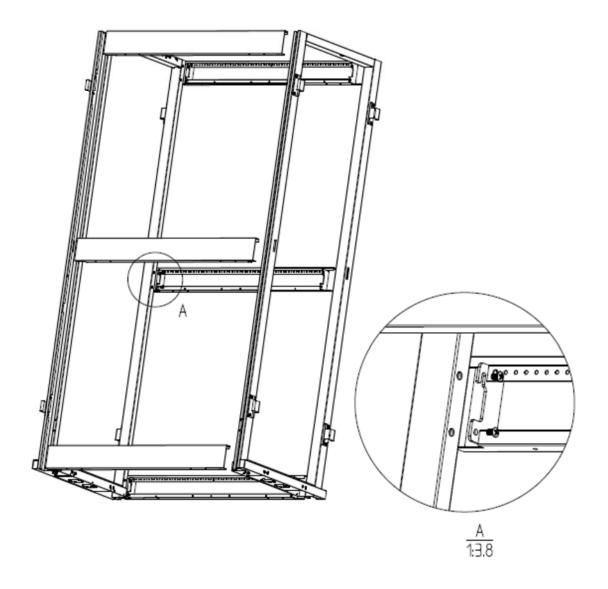

Parts name: Front frame\* 1 pcs ; Back fram\*1 pcs Support beam\*6 pcs; M6\*12 thumb Screws\*24 sets

#### **BOTTOM INSTALLATION**

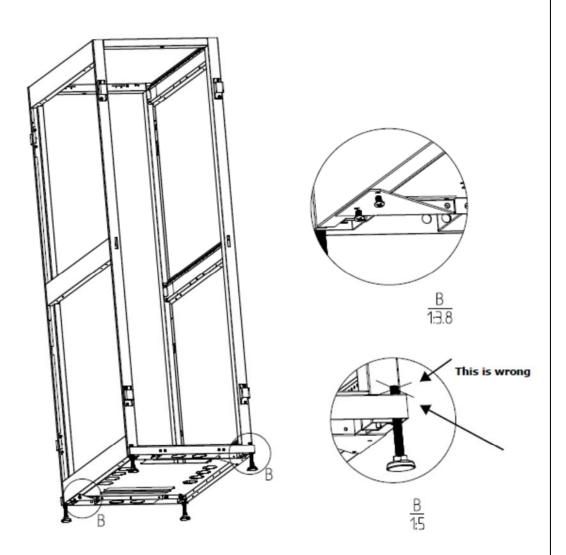


Accessories:triangle fasteners\*4pcs; bottom panel\* 1 pcs M5\*10 self tapping \*40 pcs

- 1. Strengthen the body's steady by triangle fasteners,which are used between the frame and support beam. Fixing them by M5 $^{*}$ 10 self tapping screws.
- 2. Then put on the bottom panel on it. find the holes and fix them by M5\*10 self tapping screws. Do not forget to fix it to the frame and support beam.

ps: feet should keep the same level to the cabinet, and feet need to be fixed when the cabinet lays down.

# TOP INSTALLATION

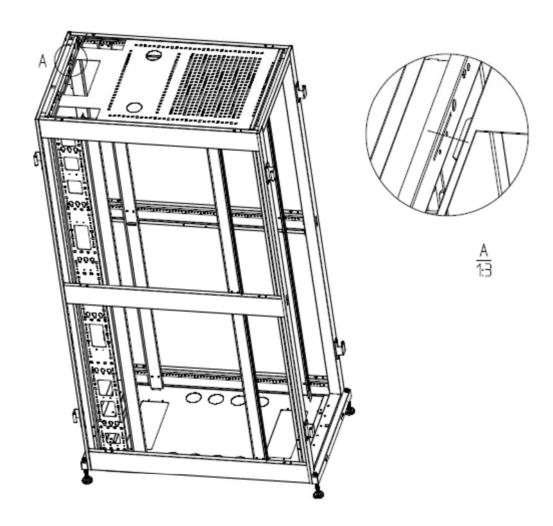

Parts: Body\*1; Top panel\*1


1. Insert the top panel into the body, refer to the drawing.


# INNER INSTALLATION cable tray Mounting profile Support beam

Parts: Mounting profiles\*4 pcs; Cable tray\*2 pcs; M5\*10 self tapping screws\* 30 sets

 Fix the mounting profiles&cable tray against the support beam by M5\*10 screws. Refer to the enlarged drawing please.

#### DOORS INSTALLATION

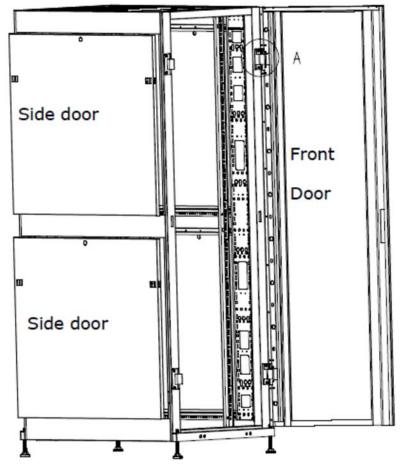

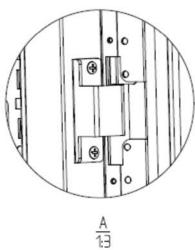

Parts: Side door\*4 pcs; Front door\*1; A pair of back doors

- 1. Insert the side doors into the body from the side. If wanna get them out,pls push the plastic joints.
- Insert the front(back) door into the hinge. Like the drawing shows.