


# 110D Keystone Jack Installing Instruction

1

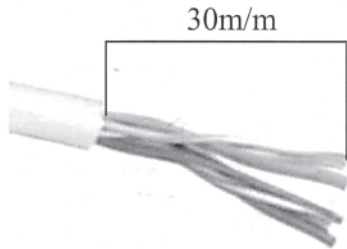

Strip approximately 30mm of the cable jacket, and separate to 4 pair each.

2



## T568B


Pin5 White/Blue  
Pin4 Blue  
Pin1 White/Orange  
Pin2 Orange  
Pin3 White/Green  
Pin6 Green  
Pin7 White/Brown  
Pin8 Brown

## T568A

Pin5 White/Blue  
Pin4 Blue  
Pin1 White/Green  
Pin2 Green  
Pin3 White/Orange  
Pin6 Orange  
Pin7 White/Brown  
Pin8 Brown

Follow the direction on the color coding sticker to position T568A or T568B wiring.

3

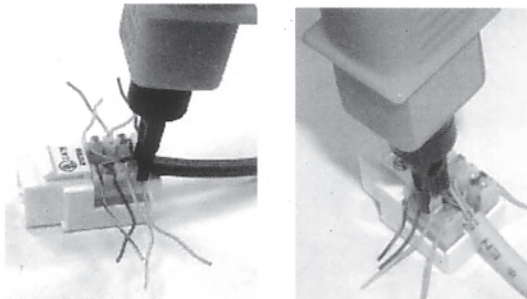

Use the impact tool to crimp and connect the wires.  
( Note: The wire has to be cut outside )


4

With cable tie version.



Cable tie

Without cable tie version

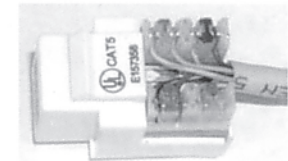

Hold tightly with cable jacket by cable tie to avoid the cable knock off or pulling away, then complete the installation.