
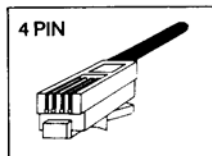


**T0021
Economy
4P Modular Tool**

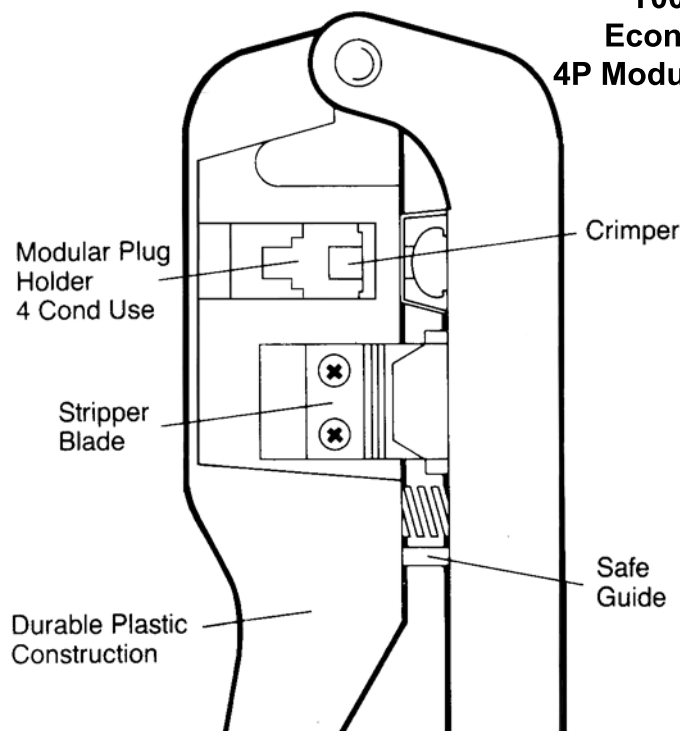

INSTRUCTIONS:

1. Cut the modular cable to the desired length. Make certain that the ends are cut squarely, not diagonally.
2. Insert the cable between the stripper blades until it touches the stop. Squeeze the handles and pull the tool so that the cable stays perpendicular to it. If done correctly the outer insulation of the cable will be removed without damaging the insulation on the inner conductors.
3. Place a modular plug in the holder so that the front of the plug is against the stop and the gold contacts face the crimper. Insert the prepared cable into the plug. Make certain that the inner conductors are flush with the tip of the conductor and directly under the gold contacts. Squeeze the handles firmly to set the contacts and secure the cable, thus completing the operation.