


T0035 - H1130 Crimp Tool

1. PLACE H1130 CRIMP INTO SLOT 4 (20-26) OF CRIMP TOOL.
2. INSERT WIRE INTO CRIMP
3. SQUEEZE CRIMP TOOL HANDLES TOGETHER

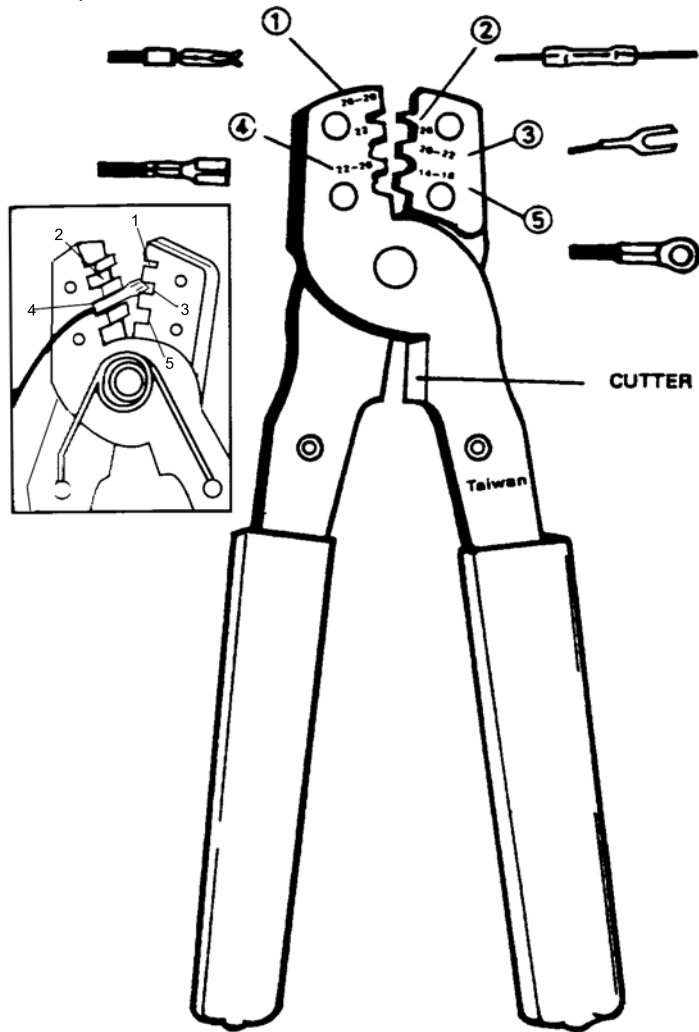

SLOT	CRIMP	WIRE
1	COMPUTER PINS, SOCKETS & D-SUB	26-28 AWG
2	BUTT-INSULATED CONNECTORS	22-26 AWG
3	SPADE LUGS	22-26 AWG
4	H1130 TELEPHONE PLUG CRIMP	22-26 AWG
5	NON-INSULATED CONNECTORS	14-18 AWG

