

TO USE "MEMO" FEATURE

STORE


1. Lift the handset.
2. Press STORE.
3. Enter the telephone number you wish to store.
4. Press STORE.
5. Enter the one-digit memory location number (0-9).
6. To store additional numbers repeat steps 2 through 5.

DIALING A NUMBER FROM MEMORY

1. Lift the handset.
2. Press MEMO. Then, enter the one-digit code for the number you wish to dial.


FOR DESK OR TABLE-TOP USE

1. Insert one end of the coiled cord provided into the handset and the other end of the cord into the modular jack on the narrow left side of the base.
2. Insert the straight line cord provided into the line jack on the rear side of the base and the other end of the line cord into the wall outlet.
3. Place on a flat surface, table or desk, and lift up the handset to listen for a dialtone. Now your phone is completely installed and connected.

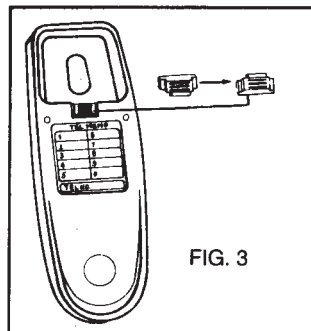

FOR WALL MOUNTING

1. To prevent the handset from falling, reverse the handset holder to the wall mount position (See fig 3)
2. An optional easy to install modular wall mounting kit, model P1415, is available from your reseller. Using this kit, mount the unit to the wall phone plate so that the studs on the plate insert into the slots on the bottom of the main unit. The unit will be seated securely by the upper and lower studs hooked respectively into the upper and lower slots.

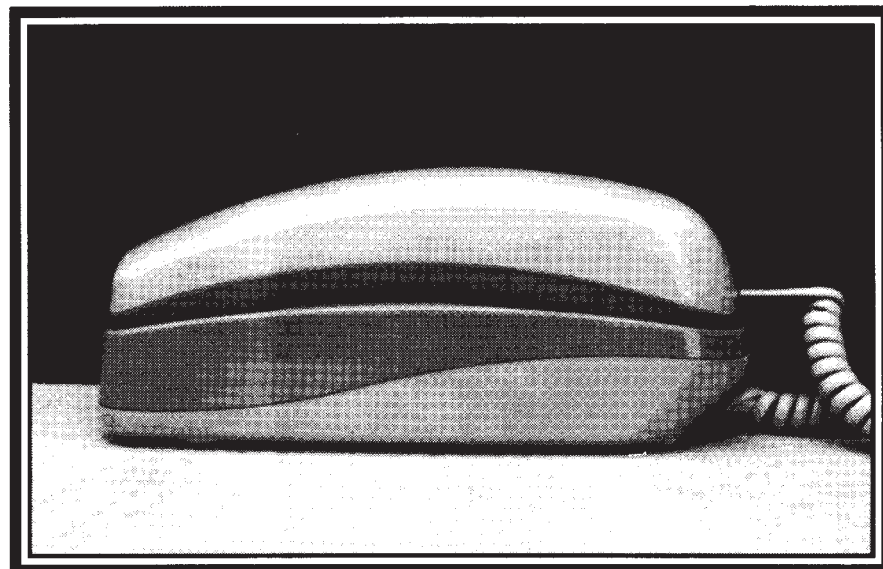



THINFONE[®]

OWNER'S MANUAL AND OPERATING INSTRUCTIONS

INTRODUCTION

Congratulations on purchasing this Telephone. This quality product is designed to give you years of continuous service. We ask that you read this manual completely before attempting to install or operate your telephone so that you will become familiar with its features.

CONTROLS

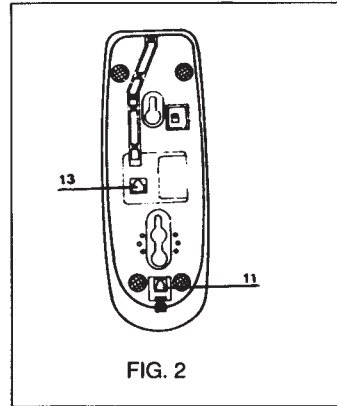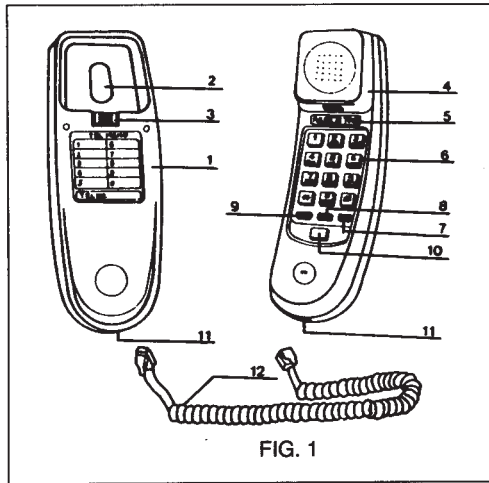

1. BASE
2. HOOK SWITCH
3. HANDSET HOLDER
4. HANDSET
5. TONE/PULSE SWITCH
6. NUMBER BUTTONS
7. REDIAL BUTTON
8. MEMO BUTTON
9. STORE BUTTON
10. FLASH BUTTON
11. COIL CORD JACK
12. COIL HANDSET CORD
13. LINE JACK

OPERATION

TO MAKE A CALL

1. TONE or PULSE SWITCH

To determine the correct position of the switch, first select the TONE position, then press button ① on the dial pad. If the dial tone disappears, your phone is ready for use. However, if dial tone remains, select the PULSE position.

2. Remove the handset from the base and listen for a dial-tone.
3. Proceed to dial the desired number. You may press the number buttons as rapidly as you wish.
4. If you err in dialing, press the HOOK SWITCH and obtain a new dialtone. If you receive a busy signal (or just wish to call the same number again) you can press the "REDIAL" button for redialing in both versions - TONE or PULSE.
5. When your call is completed, hang up the phone by resting the handset in the cradle of the base.

TO RECEIVE A CALL

When the phone rings, remove the handset from the base and proceed to converse (the receiver to your ear and the transmitter to your mouth), just like any other regular telephone.

TO OPERATE "REDIAL" BUTTON

This telephone automatically stores the last number when you dialed on either Pulse or Tone. If you receive a busy signal, hang up the phone or press the HOOK SWITCH button to get new dial tone then press the "REDIAL" button for automatic redial.

"FLASH BUTTON"

Your THINFONE now has 100mS timed HOOKFLASH for compatibility with network services such as CALL WAITING, CALL TRANSFER & 3-WAY CONFERENCING provided that you are an EASYCALL subscriber.

The FLASH BUTTON also provides call transfer when used in conjunction with PABX systems requiring 100mS hookflash.