
CT35/CT40 CHAIN TENSIONER INSTRUCTION

REVISED 7/8/14

- REMOVE EXHAUST, CHAIN & DRIVE CLUTCH. NOTE: BOLT CAN BE LOOSENED BY TAPPING WRENCH WITH BLOCK OF WOOD.
- 2. (Z120 CAT) REMOVE EXCITING TENSIONER BY REMOVING 2 BOLTS FROM BRAKE BAND BRACKET, AFTER REMOVING TENSIONER REPLACE BRACKET.
- 3. (MINI Z SKI DOO) REMOVE EXISTING TENSIONER BY SLIDING OFF STUD, USE A VISE-GRIP OR A GOOD PAIR OF PLIERS TO BREAK OFF TENSIONER STUD FROM BULK HEAD, GRIND OR FILE REMAINING PART OF STUD SMOOTH
- 4. WIPE ALL GREASE AND DIRT FROM SIDE OF BULK HEAD.
- 5. INSTALL NEW TENSIONER ON SLED. SEE DIAGRAM BELOW
- LOOSEN SPROCKET NUT AND SLIDE SPROCKET TO BOTTOM OF TENSIONER.
- 7. INSTALL DRIVE CLUTCH AND CHAIN.
- 8. AFTER INSTALLING CHAIN ROTATE TRACK UNTIL CHAIN IS AT IT'S TIGHTEST POINT AND THEN SET TENSIONER SPROCKET SO CHAIN HAS 1/4 INCH OF SLACK AT TOP OF CHAIN.
- 9. REINSTALL EXHAUST
- 10. **NOTE:** EXTRA WASHERS ARE SUPPLIED TO SPACE SPROCKET IN OR OUT ON TENSIONER
- 11. **NOTE:** IT IS NOT UNCOMMON FOR SPROCKET TO SHOW WEAR AFTER RUNNING.

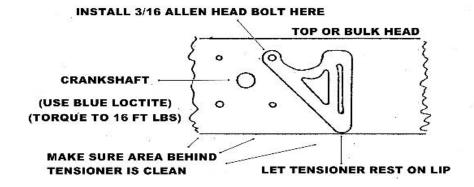

GO TO OUR WEBPAGE <u>WWW.RECMOTOR.COM</u> AND CLICK ON THE MORE INFO ON THE CT35 FOR A PICTURE TO HELP YOU WITH THIS INSTALLATION.

TECH LINE (319) 462-6932 MONDAY 8 AM TO 5PM, TUESDAY AND WEDNESDAY 8 AM TO NOON CST.

**************PLEASE NOTE*********

This product is intended for closed-course racing only and is sold "as-is" without warranty. Manufacturer and distributor specifically disclaim all responsibility for consequential and incidental damages or any other losses arising from the use of this product. Any dispute arising out of the use of this product must be settled in Linn County, Iowa under Iowa law.